



349-L Copperfield Blvd. #226
Concord, NC 28025
(704)-932-5901
www.raptorperformance.com

Warning Light Operating Instructions



1 YEAR LIMITED WARRANTY. IN NO EVENT WILL RAPTOR PERFORMANCE OR ANY OF ITS AFFILIATES BE RESPONSIBLE FOR DAMAGES OF ANY NATURE WHATSOEVER RESULTING FROM THIS PRODUCT. NO OTHER CLAIMS ARE MADE ABOUT THIS PRODUCT, EXPLICIT OR IMPLIED.

INSTRUCTIONS FOR INSTALLATION:

THE WARNING LIGHT IS A SIMPLE HOOKUP. IT IS BASICALLY A TWO WIRE CONNECTION. RED IS CONNECTED TO A FUSED 12 VOLT SOURCE AND THE BLACK WIRE IS SIMPLY SWITCHED TO GROUND BY THE CONTROLLING CIRCUIT (RPM ACTIVATED SWITCH, LOW OIL SWITCH, HIGH TEMP SWITCH, ETC.).

- REMOVE THE NEGATIVE BATTERY CABLE BEFORE MAKING ANY ELECTRICAL CONNECTIONS.
- CONNECT THE RED WIRE OF THE SHIFT LIGHT TO A **FUSED** +12 VOLT SOURCE.
- CONNECT THE BLACK WIRE OF THE WARNING LIGHT TO A SWITCHED OUTPUT (USER'S EXTERNAL CONTROL CIRCUIT).
- RESTORE BATTERY CABLE CONNECTION.

MAXIMUM VOLTAGE: 16VDC

